

# **HAWKES BAY ORIENTEERING CLUB**

## **EVENT CLOCKS**

### **SEIKO SYSTEM STOP WATCH S129 - STOP WATCH & PRINTER**

Model Number: S129-400A

Serial Number: 271063

This is a clock, stopwatch with 100 lap/split memory and printer.

**Treat these clocks with care, they don't like dust, dirt or long periods in bright sunshine (the paper is heat sensitive.)**

#### **To set the clock time...**

- Lock off (up)
- Press red RESET button to select number on screen to be changed. The selected number will be blinking.
- Press START/STOP button to change the selected number.
- Lock on (down)

(To finish setting time press RESET button until no numbers are blinking.)

#### **To print finish times...**

- Lock off (up)
- Power on (up)
- Press START/STOP button - prints start date, 'ST-' and clock time
- Lock on (down)
- Press red RESET button whenever a finisher crosses the line, sequential number and clock time are printed.

#### **To stop printing and reset sequential counter...**

- Lock off (up)
- Press START/STOP button - prints '/S/' and the clock time
- Lock on (down)
- Power off (down)

#### **Trouble / Won't go...**

- Check the slide switch on the righthand side of the clock, it should **not** be set to "Ext"
- If printing sounds right, but print-out faint/unreadable, try feeding more paper through and print again. (The paper is heat sensitive, sometimes the outer layers lose their heat sensitivity in storage.)
- No printing at all, but clock is working, several possibilities...
  - needs new batteries.

## **HAWKES BAY ORIENTEERING CLUB**

### **EVENT CLOCKS**

- Clock is set to the wrong “mode”. Check the small buttons below the red RESET button. The clock must be in “TIME” mode.
- Clock is set to the wrong “mode”. The Stopwatch mode is still running? Press the “Stopwatch” mode button and make sure the stopwatch mode display is all zeroes.